
ResponseCard RF® and RF LCD®

The ResponseCard RF and RF LCD are audience response devices used when a presenter wants to gather immediate feedback from the audience.

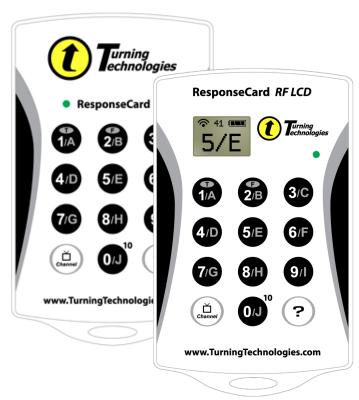

RESPONDING

- A green flash indicates that the response was received.
- Two red flashes indicate that the answer choice was invalid.
- A single yellow flash indicates that polling is closed.
- Multiple yellow flashes indicate that the response is sending.
- Multiple yellow flashes followed by a red flash indicate that the response was not received.

CHANGING THE CHANNEL

- 1. Press the **Channel**, **CH** or **GO** button.
- 2. Enter the **two-digit** channel number. i.e. 07 or 52
- 3. Press the **Channel**, **CH** or **GO** button.

A green flash indicates the channel was successfully changed.

THE RF LCD SCREEN



When transmitting a response, the symbol appears

Verify the channel the Response-Card is set to, i.e. 41

Determine battery life from the Battery Life Indicator

Verify your response on screen, i.e. 5/E

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

